

OP-931 Hanging Scale Calibration Procedure

- 1) Press the HOLD and TARE key simultaneously when turning on the OP-931 hanging scale;
- 2) Cal kg is displayed; Press TARE key to change to lb or kg; Press HOLD key to confirm;
- 3) FS X is displayed; X is the number corresponding to the capacity as shown in table below; Press TARE key to change; Press HOLD key to confirm;

Display	Max Capacity	Resolution	Calibration Weight
FS 0	30.00kg	0.01kg	25kg
FS 1	60.00kg	0.02kg	50kg
FS 2	100.00kg	0.05kg	75kg
FS 3	150.00kg	0.05kg	100kg
FS 4	200.00kg	0.1kg	150kg
FS 5	300.00kg	0.1kg	200kg

- 4) Calon is displayed; Press HOLD key to enter calibration; Press POWER key to exit calibration;
- 5) LoAd0 is displayed; This is zero calibration; Make sure nothing on the scale and press HOLD key to execute zero calibration;
- 6) LoAd1 is displayed; Hang the Calibration Weight as determined in the table above; After the calibration weight is stable, press HOLD key to execute load calibration;
- 7) End is displayed; Press HOLD key to save; Press POWER key to exit;