


# TOUCH-FREE DISPENSER INSTALLATION MANUAL



**1**  
First, open the front cover with the key provided or any car keys.

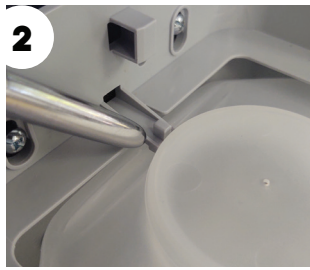

**2**  
Press down on the reservoir to release it.




**3**  
Hold the top and press down.



**4**  
Start by removing the reservoir with one hand on the top and one on the white nozzle.



**5**  
Fill the reservoir with sanitizer solution and prime the tube by squeezing it until sanitizer runs steady without any air bubbles.  
**\*If it doesn't drip, please repeat step 5 till it drips.**

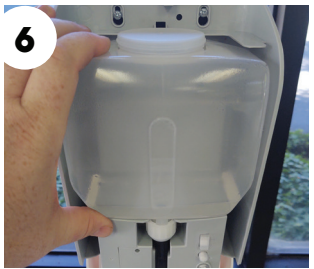

**6**  
Remove the reservoir to access the battery cover.



**7**  
Lift up on cover.



**8**  
Start to install battery.




**9**  
4 "C" batteries.



**10**  
Completed installation of batteries.



**11**  
Close up the battery cover.

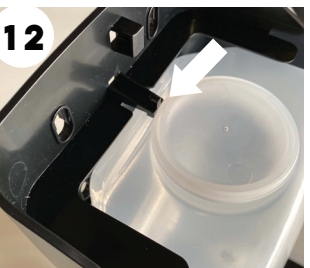

**12**  
Place the reservoir back into the unit. Make sure the it is clipped in place as shown.



**13**  
Press the white nozzle into place.



**14**  
**\*\*\*Important!** Use your fingers to press the black tube into place. If the tube is not set up right, the sanitizer will not dispense.



**15**  
Your dispenser is now ready for use.


## QUICK FIX FOR LEAKING NOZZLE

**STEP 1**  
Open Your Dispenser cover.

**STEP 2**  
Turn Off Dispenser.

**STEP 3**  
Remove The Reservoir.

**STEP 4**  
Lay your reservoir on a flat surface and use a standard pliers and grip down on the black hose above the white colored nozzle.

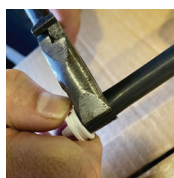

**STEP 5**  
With your opposite hand, grip the white nozzle and right hand tighten, while holding down on the hose portion.



**(NOTE: THERE IS A THREADED CAP INSIDE THE HOSE THAT SOMETIMES WORKS ITSELF LOOSE FROM THE NOZZLE, THUS REQUIRES TIGHTENING)**

**TUFNER INC.**

**HEADQUARTERS**  
9030 BRIDGEPORT PLACERANCHO CUCAMONGA, CA 91730

**MANUFACTURING FACILITY**  
1800-1900 NORTH COLLINS FWY.HOWE, TX 75459

**888.688.4833**

**SALES@TUFNER.COM**

**WWW.TUFNER.COM**