

# STAND ASSEMBLY GUIDE

Package includes:



#A Column (1)



#B Dispenser (1)



#C Base Plate (1)



#D Bolt (1)



#E Screw ( )



#F Small Locking Washer ( )



#G Large Locking Washer (1)




#H Butterfly Nut ( )



## Step 1



Attach #A column to #B dispenser via #C base plate, #D bolt, #E screw, #F small locking washer, and #H butterfly nuts.

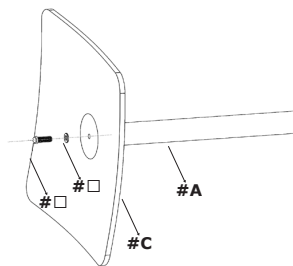

C-washer


## Step 2

Open #B dispenser with the key provided or any flat object.

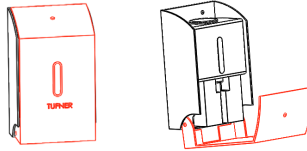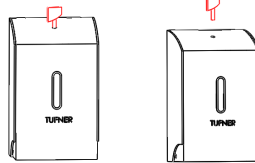


## Step 3

Remove the reservoir from #B dispenser.

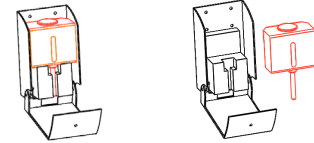

To install batteries (not included): push up on battery cover to open. Requires 4 C batteries.

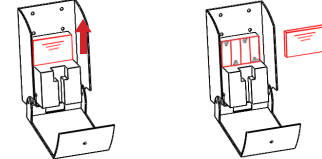


For detailed initial setup of the dispenser, please refer to the manual inside the dispenser package.

## Step 4

Install #B dispenser on #C base plate via #E screws, #F small locking washer, and #H butterfly nuts.





**\*Do not Force\***

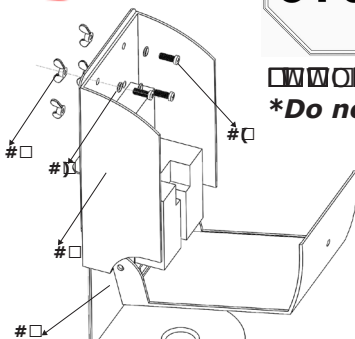


## Step 5

Put the reservoir back into the #B dispenser and close the front side.

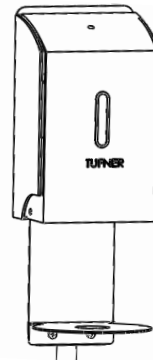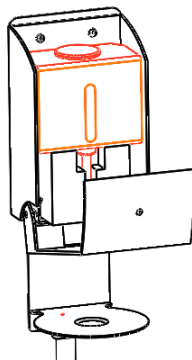

## Step 6

Dispenser stand completed.

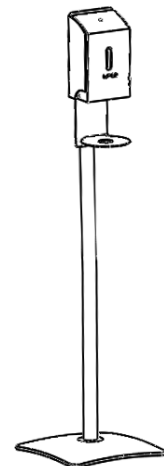

**TUFNER INC.**

**HEADQUARTERS**  
9030 BRIDGEPORT PLACE RANCHO CUCAMONGA, CA 91730  
**MANUFACTURING FACILITY**  
1800-1900 NORTH COLLINS FWY. HOWE, TX 75459

**888.688.4833**  
**SALES@TUFNER.COM**  
**WWW.TUFNER.COM**