




Bench Scale Installation Guide

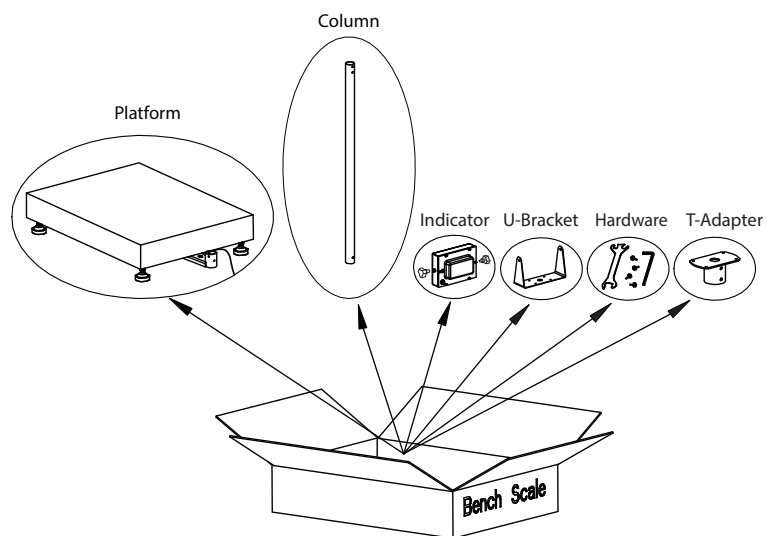


Lift tray, and remove the four yellow rubber frame protectors tags

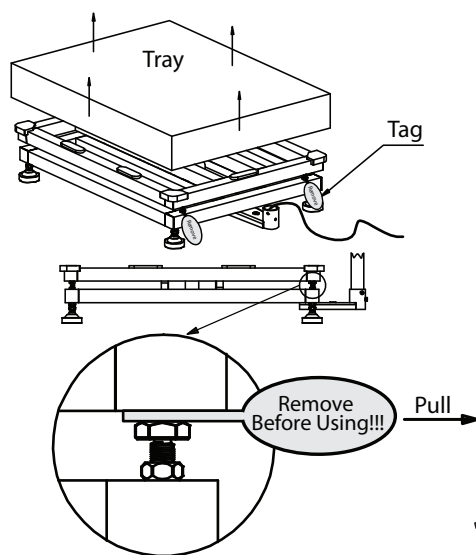


Carefully, without tugging, run the cable through the column and assemble column to base

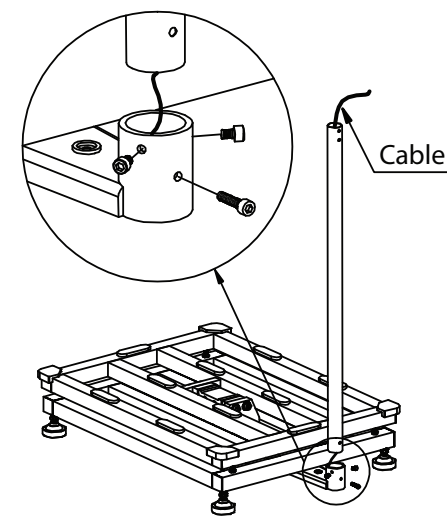


Assemble T-Adapter and U-bracket as shown below

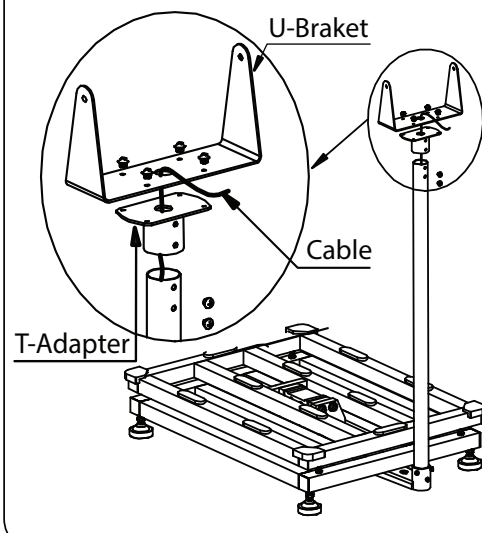


Install indicator to U bracket with 2 knobs and connect the cable to the indicator interface port

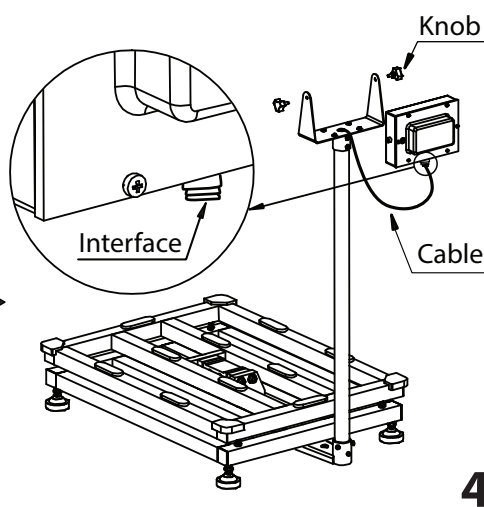


Place the tray on the scale frame; Use level bubble to level the scale by adjusting the feet

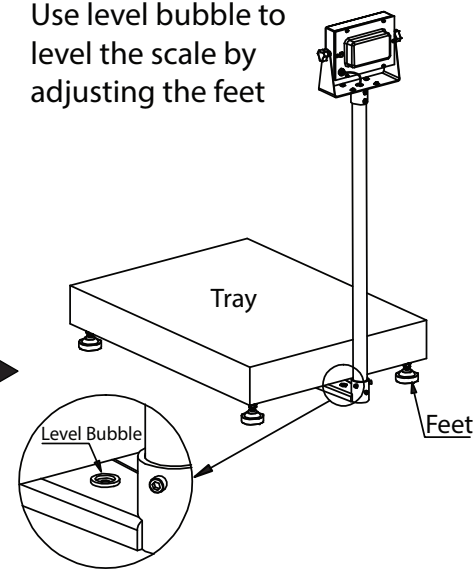


Washdown Stainless Steel Bench Scale Installation Guide

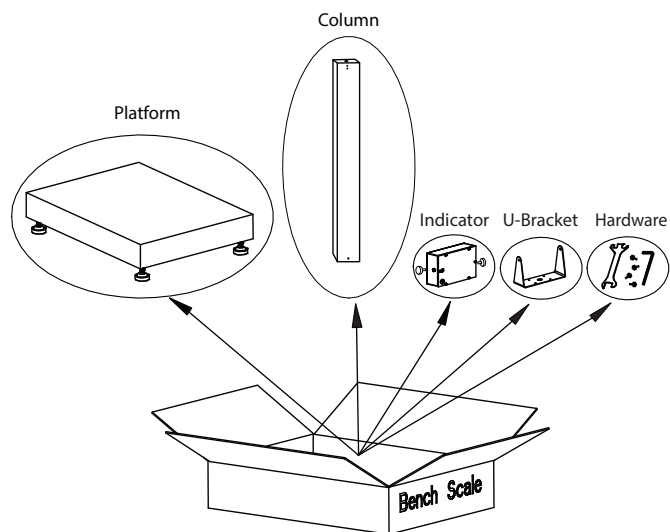


Lift tray, and remove the four yellow rubber frame protector tags

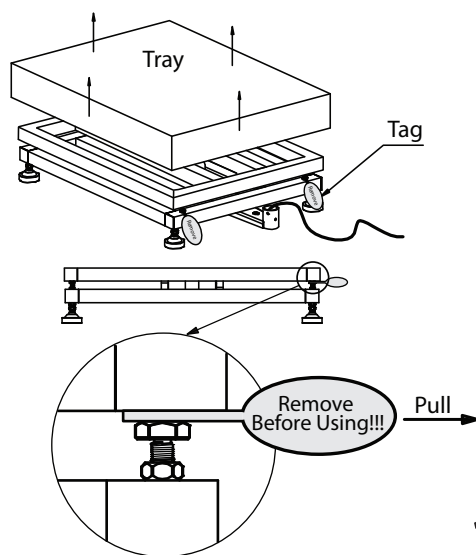


Locate the plate on the underside of the scale frame. Using the L-wrench remove the 4 screws and use them to secure the column in place

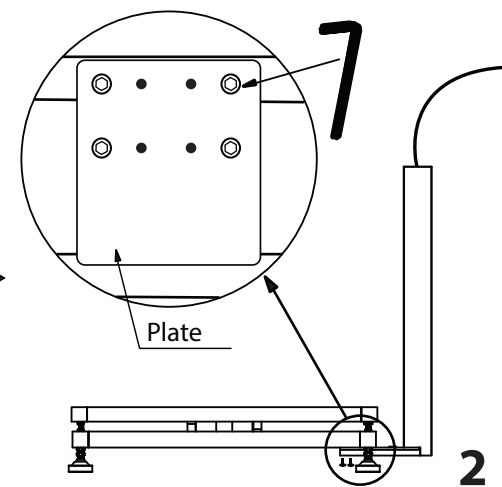

Use the 4 screws on the U-bracket to secure the bracket to the column

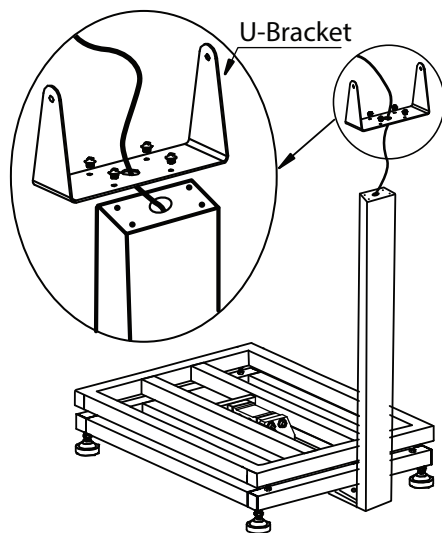

Install indicator to U bracket with the 2 steel knobs

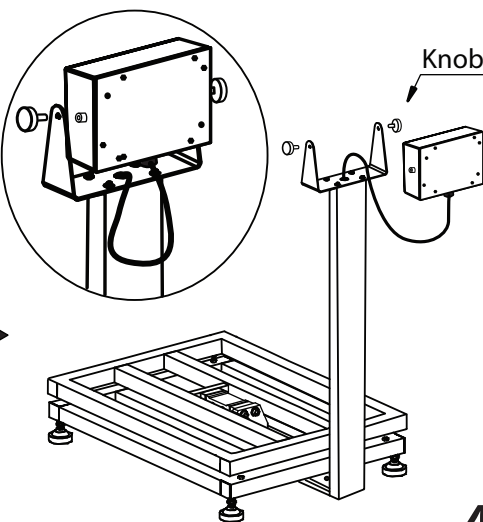

Place the tray on the scale frame; Use level bubble to level the scale by adjusting the feet

